

MAN & MACHINE Cleaning and disinfecting instructions

The best practice for cleaning and disinfecting our keyboards and mice, including the cleaning frequency and method, will depend on the specific use and conditions in your hospital or clinical establishment.

Your Infection Control Team can give you specific guidance on which cleaning protocols should be established in your facility.

In general terms, we recommend treating our products as you would treat any other high frequency touch surface in the same room.

On these pages you can verify if the cleaning methods you wish to follow and the disinfectant you intend to use are compatible with our products.



We refrain from using antimicrobial coatings, rather emphasizing the need to disinfect regularly.



Restrictions

- Always follow the instructions provided by the manufacturer of the cleaning product.
- Do not use petroleum based cleaning fluids nor Acetone or abrasive cleaning aids and products.
- Do not use temperature or pressure sterilization.
- Do not expose the product to temperatures above those indicated in the product manual.
- Exposing any silicone product to the oils contained in some hand alcohol, hand lotions and other emollients reduces their life span.
Regular cleaning helps to limit this effect.
Such degradation is not covered under warranty.



Best practice tip!

**Wipe
between
treatments**

Approved disinfectants

- Alcohol based
- Chlorine based, up to 100,000 ppm (10%) bleach content
- Formaldehyde based, up to 370,000 ppm (37%) formaldehyde content
- Glutaraldehyde based
- Oxidizing, such as Hydrogen Peroxide, up to 30,000 ppm (3%) content
- Phenol based
- Quaternary Ammonium, up to 20,000 ppm (2%) content

MAN & MACHINE Cleaning and disinfecting instructions

Our cleaning program

C Mouse				
C Mouse Wireless				
Its Cool				
Its Cool Drape				
Its Cool Flat				
Laptop drapes and Mousepads				
Mighty Mouse				
Petite Mouse				
Really Cool Really Cool Touch				
Really Cool Drape				
Slim Cool Slim Cool+				
Universal keyboard Drape				
Very Cool				
Very Cool Flat				
Very Cool Drape				



Wipe

You can wipe the product with a soft cloth that is non-abrasive like a micro-fiber cloth, a disinfecting wipe, a soft brush similar to a paint brush in bristle stiffness or a sponge, but not a scourer of any sort.



Spray

You can spray the product with water and soap or an approved disinfectant.



Rinse

You can rinse the product with water and soap or an approved disinfectant.



Use Port Cover

Only immerse when cable is disconnected and cable port is entirely sealed off with port cover.




Immerse

You can immerse the product in soap and water or an approved disinfectant (except USB connector).




Expose to HPV

You can expose the product to Hydrogen Peroxide Vapour (HPV).

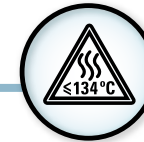


Sterilize

You can sterilize the product in an autoclave or thermo disinfectant (up to 134 °C, tested 200 cycles).

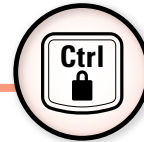

With keyboard lock To activated and deactivate, keep lock key or both Ctrl keys pressed for 3 seconds. Blocked mode is signaled.

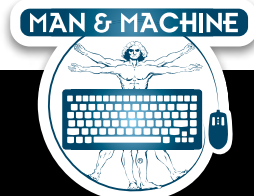

MAN & MACHINE List of approved cleaners and disinfectants

About our list of approved cleaners and disinfectants

The list on the next pages contains products that have been approved by their manufacturers for use on silicone. Although this is the best indication we can give for the product's suitability as a disinfectant for our keyboards and mice, there will always remain factors of uncertainty regarding the effects it may have on our products either

by itself or in combination with other substances to which our products may be exposed in their setting. Therefore, no rights can be claimed from this list and we always advise a test in your facility on a small batch before fully adopting a disinfectant in your overall cleaning and disinfecting protocols.

For more detailed information, please contact the manufacturer.

Product name	Manufacturer	Website
150671 Antibac Keyboard Wipes (80 wipes)	Abena A/S	www.abena.dk
Acrylan	Antiseptica chem.-pharm. Produkte GmbH	www.antiseptica.de
Alpet D2	SARAYA Europe	www.saraya-europe.com
Alpha Guard	Laboratorium Dr.Deppe GmbH	www.dr-deppe.de
Anios DDSH	Anios Laboratories	www.anios.com
Aniosurf Citron	Anios Laboratories	www.anios.com
Antiseptica Kombi Liquid	Antiseptica chem.-pharm. Produkte GmbH	www.antiseptica.de
Apesin AP 100	Tana Chemie GmbH	www.tana.de
Apesin AP 3	Tana Chemie GmbH	www.tana.de


MAN & MACHINE List of approved cleaners and disinfectants

Product name	Manufacturer	Website
Apesin AP 300	Tana Chemie GmbH	www.tana.de
Apesin combi DR	Tana Chemie GmbH	www.tana.de
Apesin rapid	Tana Chemie GmbH	www.tana.de
B 10 Wischdesinfektion	Orochemie GmbH + Co. KG	www.orochemie.de
B 20 Wischdesinfektion	Orochemie GmbH + Co. KG	www.orochemie.de
B 30 Schnelldesinfektion	Orochemie GmbH + Co. KG	www.orochemie.de
B 40 Schnelldesinfektion	Orochemie GmbH + Co. KG	www.orochemie.de
B 45 Schnelldesinfektion	Orochemie GmbH + Co. KG	www.orochemie.de
B 60 Desinfektionstücher	Orochemie GmbH + Co. KG	www.orochemie.de
Banicide Plus	Pascal International Inc.	www.pascalinternational.net
Biguacid Liquid	Antiseptica chem.-pharm. Produkte GmbH	www.antiseptica.de
Biguacid Plus	Antiseptica chem.-pharm. Produkte GmbH	www.antiseptica.de
Biguacid-S	Antiseptica chem.-pharm. Produkte GmbH	www.antiseptica.de
Buraton 10F 1%	Schülke & Mayr GmbH	www.schuelke.com
CaviCide™	Metrex Research Corporation	www.metrex.com



MAN & MACHINE List of approved cleaners and disinfectants

Product name	Manufacturer	Website
CaviWipes™	Metrex Research Corporation	www.metrex.com
Chlor-Clean	Guest Medical	guest-medical.co.uk/en
Clorox Disinfecting Wipes	Clorox	www.clorox.com
Cleanisept Wipes Maxi (80 wipes)	Dr. Schumacher GmbH	www.schumacher-online.com
Compliance	Metrex Research Corporation	www.metrex.com
Descocid-N	Antiseptica chem.-pharm. Produkte GmbH	www.antiseptica.de
Descogen Liquid	Antiseptica chem.-pharm. Produkte GmbH	www.antiseptica.de
Descogen Liquid r.f.u.	Antiseptica chem.-pharm. Produkte GmbH	www.antiseptica.de
Descosept Forte	Dr. Schumacher GmbH	www.schumacher-online.com
Destec Bavacid Floor (Dilution product)	Seitz GmbH	www.seitz24.com
Destec Bavacid Go	Seitz GmbH	www.seitz24.com
Destec Bavacid Wipe	Seitz GmbH	www.seitz24.com
Hexanios	Anios Laboratories	www.anios.com
Incides N	Ecolab Deutschland GmbH	www.ecolab.com
Incidin Perfekt 2% Vol.	Ecolab Deutschland GmbH	www.ecolab.com

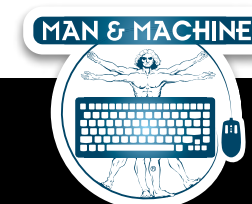


MAN & MACHINE List of approved cleaners and disinfectants

Product name	Manufacturer	Website
Incidin Pro	Ecolab Deutschland GmbH	www.ecolab.com
Incidin Rapid	Ecolab Deutschland GmbH	www.ecolab.com
Incidin Liquid	Ecolab Deutschland GmbH	www.ecolab.com
Klercide WFI	Ecolab Deutschland GmbH	www.ecolab.com
Klercide Neutral Detergent	Ecolab Deutschland GmbH	www.ecolab.com
Klercide Sporicidal Active Chlorine	Ecolab Deutschland GmbH	www.ecolab.com
Klercide Low Residue Quat	Ecolab Deutschland GmbH	www.ecolab.com
Klercide Sporicidal Low Residue Peroxide	Ecolab Deutschland GmbH	www.ecolab.com
Klercide 70/30 IPA	Ecolab Deutschland GmbH	www.ecolab.com
Klercide 70/30 Denatured Ethanol	Ecolab Deutschland GmbH	www.ecolab.com
Klercide Sporicidal Enhanced Peroxide	Ecolab Deutschland GmbH	www.ecolab.com
LifeClean disinfectant	LifeClean International AB	www.lifeclean.se
Mikrozid AF Liquid	Schülke & Mayr GmbH	www.schuelke.com
Mikrozid Sensitive Liquid	Schülke & Mayr GmbH	www.schuelke.com
MinutenSpray-classic (500 ml bottle)	Alpro Medical GmbH	www.alpro-dental.de

MAN & MACHINE List of approved cleaners and disinfectants

Product name	Manufacturer	Website
MinutenWipes (120 wipes)	Alpro Medical GmbH	www.alpro-dental.de
Neoform MED AF	Chemische Fabrik Dr. Weigert GmbH & Co. KG	www.drweigert.de
Neoform MED FF	Chemische Fabrik Dr. Weigert GmbH & Co. KG	www.drweigert.de
Neoform MED Rapid	Chemische Fabrik Dr. Weigert GmbH & Co. KG	www.drweigert.de
PlastiSept (500 ml bottle)	Alpro Medical GmbH	www.alpro-dental.de
PlastiSept-Wipes (120 wipes)	Alpro Medical GmbH	www.alpro-dental.de
Sani-24® Germicidal Spray	PDI	https://pdihc.com
Sani-Cloth® AF3 Germicidal Disposable Wipe	PDI	https://pdihc.com
Sani-Cloth Active	Ecolab Deutschland GmbH	www.ecolab.com
Sani-Cloth® Bleach Germicidal Disposable Wipe	PDI	https://pdihc.com
Sani-Cloth® Plus Germicidal Disposable Cloth	PDI	https://pdihc.com
Sani-Cloth® Germicidal Disposable Wipe	PDI	https://pdihc.com
Sani-HyPerCide™ Germicidal Spray	PDI	https://pdihc.com
Sani-Prime® Germicidal Spray	PDI	https://pdihc.com
SinAlc Tücher	HIMED GmbH	www.hibomed.de

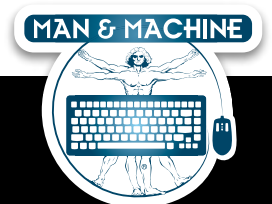

MAN & MACHINE List of approved cleaners and disinfectants

Product name	Manufacturer	Website
Sporox II	Sultan Chemists Inc.	www.sultanhc.com
Spray In Neu	Laboratorium Dr.Deppe GmbH	www.dr-deppe.de
Spray Off N	Laboratorium Dr.Deppe GmbH	www.dr-deppe.de
Super Sani-Cloth® Germicidal Disposalble Wipe	PDI	https://pdihc.com
Surfanios	Anios Laboratories	www.anios.com
Surfa'safe	Anios Laboratories	www.anios.com
Terralin Protect	Schülke & Mayr GmbH	www.schuelke.com
Ultrasol active	Dr. Schumacher GmbH	www.schumacher-online.com
Wavicide-01	MCC	http://med-chem.com/
Wet Wipe Chlorine Disinfection	Wet Wipe A/S	www.wetwipe.eu
Wet Wipe PHMB Disinfection	Wet Wipe A/S	www.wetwipe.eu
Wet Wipe Triamin Disinfection	Wet Wipe A/S	www.wetwipe.eu
Wet Wipe Ethanol Disinfection	Wet Wipe A/S	www.wetwipe.eu
Wip'anios	Anios Laboratories	www.anios.com

